


RDE100.. – the room thermostat that allows you to set the ideal room temperature at the time you want. There are several switching patterns available that can be set to your specific needs.

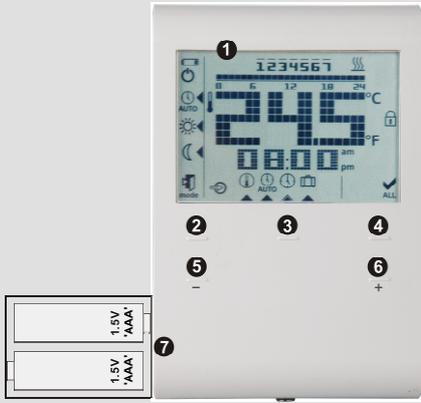

### 1. Display

	Indicating that batteries need to be replaced (only with battery-powered version)		Digits for time
	Frost protection (heating) is active	am pm	Morning: 12-hour format Afternoon: 12-hour format
	Auto Timer mode	✓ ALL	Confirmation
	View and set Auto time switch	°F	Room temperature in degrees Fahrenheit
	Comfort mode	°C	Room temperature in degrees Celsius
	Economy mode		Button lock activated
	Escape	24.5	Display of room temperature, setpoint, etc.
	External input enabled		Heating ON
	Permanent setpoint setting	1 2 3 4 5 6 7	Weekday 1 = Monday 7 = Sunday
	Day and time setting		Timer bar
	Holiday mode setting		Current room temperature

### 2. Change operating mode

### 3. Set

### 4. OK

### 5. Decrease value

### 6. Increase value

### 7. Battery holder

### Do you want to adjust the time and day?

<b>set</b> <b>ok</b> <b>+</b> <b>-</b> <b>mode</b>	Proceed as follows: <ul style="list-style-type: none"> <li>• Press <b>set</b> and select </li> <li>• Press <b>ok</b> and the time flashes for setting</li> <li>• Press <b>+</b> or <b>-</b> to adjust the time</li> <li>• Press <b>ok</b> to confirm</li> <li>• The weekday flashes, press <b>+</b> or <b>-</b> to select the desired day</li> <li>• Press <b>ok</b> to save the value</li> <li>• Press <b>mode</b> to exit or wait for the program to exit automatically</li> </ul>
--	---

### Do you want to lock the buttons?

<b>mode</b>	Press and hold <b>mode</b> for at least 7 seconds to activate a button lock. Repeat to unlock. The unit operates normally when the buttons are locked, but no changes are possible while the buttons are locked.
-------------	---

### Are your rooms too warm/too cold?

<p><b>+</b></p> <p><b>-</b></p> <p><b>ok</b></p> <p><b>set</b></p> <p><b>mode</b></p>	<p>Press <b>+</b> or <b>-</b> to increase or decrease the room temperature setpoint in increments of 0.5 °C / 1 °F . Proceed as follows:</p> <ul style="list-style-type: none"> <li>• Press <b>+</b> or <b>-</b> to adjust the setpoint temporarily. This adjustment is reset as soon as the operating mode changes.</li> <li>• Press <b>ok</b>, <b>set</b> or <b>mode</b> to save the value or wait for the program to exit automatically</li> <li>• To lock the setpoints, use parameters P06 and P08.</li> </ul>
---	---

### Do you want to change the operating mode?

<p><b>mode</b></p>	<p>The thermostat provides Comfort mode, Economy mode, and Auto mode. Changeover between the operating modes can be made manually by pressing <b>mode</b>.</p> <p> <b>Comfort mode</b> is the permanent (24 h) selection of Comfort. Select this mode to maintain Comfort temperature permanently without any time switch. It is used during occupancy periods, for example.</p> <p> <b>Economy mode</b> is the permanent (24 h) selection of Economy. Select this mode to maintain the Economy temperature permanently without any time switch. It is used during non-occupancy periods, for example at night.</p> <p> In <b>Auto timer mode</b>, operating modes (Comfort, Economy) are changed automatically according to the time switch set.</p> <p><b>Note:</b> <b>Frost protection</b> is a function always active in the background. As soon the room temperature falls below 5 °C, the unit automatically activates the heating .</p>
--------------------	--

### Do you want to set permanent temperature setpoints?

<p><b>set</b></p> <p><b>ok</b></p> <p><b>+</b></p> <p><b>-</b></p> <p><b>mode</b></p>	<ul style="list-style-type: none"> <li>• Press <b>set</b> and select </li> <li>• Press <b>ok</b> to confirm</li> <li>• Press <b>mode</b> to select an operating mode, Comfort or Economy</li> <li>• Press <b>+</b> or <b>-</b> to adjust the setpoint permanently.</li> <li>• Press <b>ok</b> to confirm</li> <li>• Press <b>mode</b> to exit or wait for the program to exit automatically</li> </ul> <p><b>Note:</b> This permanent setpoint is used during Auto timer mode.</p>
---	--

### Energy saving tips without sacrificing comfort

- Select Auto timer mode during the heating period, and set the time switch according to your normal habits at home
- Select Economy mode or Holiday mode for long periods of non-occupancy and during summer period

### Do you want to set your Holiday mode?

<p><b>set</b></p> <p><b>ok</b></p> <p><b>+</b></p> <p><b>-</b></p> <p><b>mode</b></p>	<p>Use the Holiday mode to set the thermostat to a constant temperature while absent.</p> <ul style="list-style-type: none"> <li>• Press <b>set</b> and select </li> <li>• Press <b>ok</b> to confirm</li> <li>• Press <b>+</b> or <b>-</b> to adjust the temperature setpoint</li> <li>• Press <b>ok</b> to confirm</li> <li>• Press <b>+</b> or <b>-</b> to adjust the number of days for holidays (Note: 0 = Holiday mode OFF)</li> <li>• Press <b>ok</b> to save the value</li> <li>• When Holiday mode is activated, the remaining days are displayed on the screen</li> </ul> <p><b>Note:</b> If you press <b>mode</b> while Holiday mode is active, the function is turned off and the  symbol disappears.</p> <p>If the Comfort and Economy setpoint values are both locked, the lowest locked setpoint value is the Holiday mode setpoint value. You can adjust the setpoint temperature from 5 °C up to the lowest locked setpoint value.</p>
---	---

### Do you want to enter your own time switch?

#### Option 1: Time switch with individual day selection (P11=0)

<p><b>set</b></p> <p><b>ok</b></p> <p><b>+</b></p> <p><b>-</b></p> <p><b>mode</b></p>	<p>You can select Comfort mode or Economy mode at 15 minute intervals throughout the day. The 0:00 to 24:00 hour time bar allows you to set the operating mode for the selected day(s).</p> <p>Example:</p> <p>① Visible bars: Control to Comfort temperature ② Invisible bars: Control to Economy temperature</p> <p>When Auto timer mode is enabled, changeover between the operating modes is automatic after the settings are saved.</p> <p>Proceed as follows:</p> <ol style="list-style-type: none"> <li>1) Press <b>set</b> and select </li> <li>2) Press <b>ok</b> to confirm.</li> <li>3) Time switch for day Mon(1) is displayed.</li> <li>4) Press <b>+</b> or <b>-</b> to select the day, from Mon(1) to Sun(7).</li> <li>5) Press <b>ok</b> to confirm the selection and initiate time programming.</li> </ol> <p><b>During programming step:</b></p> <ol style="list-style-type: none"> <li>6) Press <b>mode</b> to select an operating mode, (Comfort or Economy) <b>or</b></li> <li>7) Press <b>+</b> or <b>-</b> to adjust the time setpoint by 15 minutes for the selected mode.</li> </ol> <ol style="list-style-type: none"> <li>8) Press <b>ok</b> to save the time switch.</li> <li>9) Repeat steps 4-8 for all remaining days (if required); <b>or</b></li> <li>10) Press <b>mode</b> or wait for the program to exit automatically.</li> </ol>
---	--

**Option 2: Time switch with the same 7 day selection (P11=1)**

**set**  
**ok**  
**+**  
**-**  
**mode**

You can set all the 7 day time switches at the same time.  
Example:

① Visible bars: Control to Comfort temperature  
② Invisible bars: Control to Economy temperature

Proceed as follows:

- 1) Set the parameter (P11=1). Please refer to the section "**Do you want to change parameters**".
- 2) Press **set** and select .
- 3) Press **ok** to confirm.
- 4) Time switch for period Mon (1) - Sun (7) is displayed.
- 5) Press **ok** to initiate time programming.

**During programming step:**

- 6) Press **mode** to select an operating mode, (Comfort or Economy) **or**
- 7) Press **+** or **-** to adjust time setpoint by 15 minutes for the selected mode.

- 8) Press **ok** to save the time switch.
- 9) Press **mode** or wait for the program to exit automatically.

**Factory default for 7-day time switch**

Default value	Day/s	Comfort mode	Economy mode
	Mo (1) – Fr (5)	6:00 – 8:00 hr 17:00 – 22:00 hr	22:00 – 6:00 hr 8:00 – 17:00 hr
	Sa (6) – Su (7)	7:00 – 22:00 hr	22:00 – 7:00 hr

**Does symbol appear on the display?  
(Only with battery-powered versions)**

Symbol is displayed when the batteries are low. Replace them with 2 new alkaline batteries type AAA. Proceed as follows:

- Get 2 new alkaline batteries type AAA
- Remove the battery holder, then the batteries, insert the new batteries and, within 1.5 minutes, replace the battery holder
- Ensure the exhausted batteries are disposed of correctly, in compliance with environmental requirements

**Option 3: Time switch with 5-2 day selection (P11=2)**

**set**  
**ok**  
**+**  
**-**  
**mode**

You can set Monday - Friday time switch at once and Saturday - Sunday time switch at once.  
Example:

① Visible bars: Control to Comfort temperature  
② Invisible bars: Control to Economy temperature

Proceed as follows:

- 1) Set the parameter (P11=2). Please refer to the section "**Do you want to change parameters**".
- 2) Press **set** and select .
- 3) Press **ok** to confirm.
- 4) Time switch for period Mon(1) - Fri(5) is displayed.
- 5) Press **+** or **-** to select the period, Mon (1) - Fri( 5) or Sat (6) - Sun (7).
- 6) Press **ok** to confirm the selected period and initiate time programming.

**During programming step:**

- 7) Press **mode** to select an operating mode, (Comfort or Economy) **or**
- 8) Press **+** or **-** to adjust the time setpoint by 15 minutes for the selected mode.

- 9) Press **ok** to save the time switch.
- 10) Repeat the steps 5-9 for the other period if necessary; or
- 11) Press **mode** or wait for the program to exit automatically.

## Do you want to change the parameters?

<p><b>+</b> <b>-</b> <b>ok</b> <b>mode</b></p>	<p>If you want to change control parameters, proceed as follows:</p> <ul style="list-style-type: none"> <li>• Press <b>+</b> and <b>-</b> simultaneously for 5 seconds</li> <li>• Release them and parameter "P01" is displayed on the bottom segment</li> <li>• Press <b>+</b> or <b>-</b> to scroll to the parameter that needs to be adjusted</li> <li>• Press <b>ok</b> to select this parameter</li> <li>• Press <b>+</b> or <b>-</b> to adjust the value</li> <li>• Press <b>ok</b> to confirm the adjusted value</li> <li>• Press <b>mode</b> to exit the parameters without saving or wait for the program to exit automatically</li> </ul>
--	---

## Parameter list

Parameter no.	Description	Setting range (default)
P01	Time format	1 = 24:00 hours (default) 2 = 12:00 AM/PM
P02	Selection of °C or °F	1 = °C (default) 2 = °F
P03	Standard temperature display	1 = room temperature (default) 2 = setpoint
P04	Temperature sensor calibration	-3...3 °C Step 0.5 °C (-6...6 °F, step 1 °F) Default: 0 °C
P06	Comfort setpoint lock	0 = OFF (default) 1 = ON → locked according to setting in permanent temperature setpoint
P08	Economy setpoint lock	0 = OFF (default) 1 = ON → locked according to setting in permanent temperature setpoint
P09	Buzzer	0 = OFF 1 = ON (default)
P10	Show frost protection icon	0 = OFF (default) 1 = ON
P11	Time switch type for auto timer	0 = Individual Days (default) 1 = All 7 days 2 = 5/2 days
P12	Periodic pump run	0 = OFF (default) 1 = ON
P14	X1 External input (only for RDE100.1)	0 = No input 1 = External sensor 2 = Digital Input
P15	Temperature limitation (only for RDE100.1)	0 = OFF (default) 1 = ON
P16	Max limitation temperature for underfloor heating (only for RDE100.1)	35...60 °C, step 1 °C or 95...140 °F, step 1 °F Default: 55 °C
P17	Window contact features (only for RDE 100.1)	0 = Normally Open Contact (default) 1 = Normally Closed Contact
P21	Button scanning rate for the capacitive buttons (RDE100.1 only) Note: a shorter scanning rate means shorter battery life.	0.2 = 0.25 s 0.5 = 0.5 s 1.0 = 1.0 s (default) 1.5 = 1.5 s
P22	Reload factory settings	0 = OFF (default) 1 = reload
P23	Software version information	No adjustment possible